

COMPONENT BREAKDOWN:



HARDWARE INCLUDED:



PIN



CAM



COVER
CAP



12" X 18"
BRACE



L-BRACKET



5/8" WOOD
SCREW

DISCLAIMERS

- Use all hardware provided to secure components as specified.
- This installation will require 2 or more people.
- Read all instructions and review all illustrations before installing. Failure to observe these warnings could result in injury.
- Product that is damaged by the end user due to misuse, accident, abuse, negligence or shipping is not covered under warranty.


STEP ONE

Place top on soft, clean, scratch resistant surface with the pilot holes facing upwards.



STEP TWO

Attach the modesty panels to the side panels using the provided pins and cams. Once secured, align and fasten the assembled structure to the top using the remaining pins and cams. Cover any exposed cams using the cover caps provided.

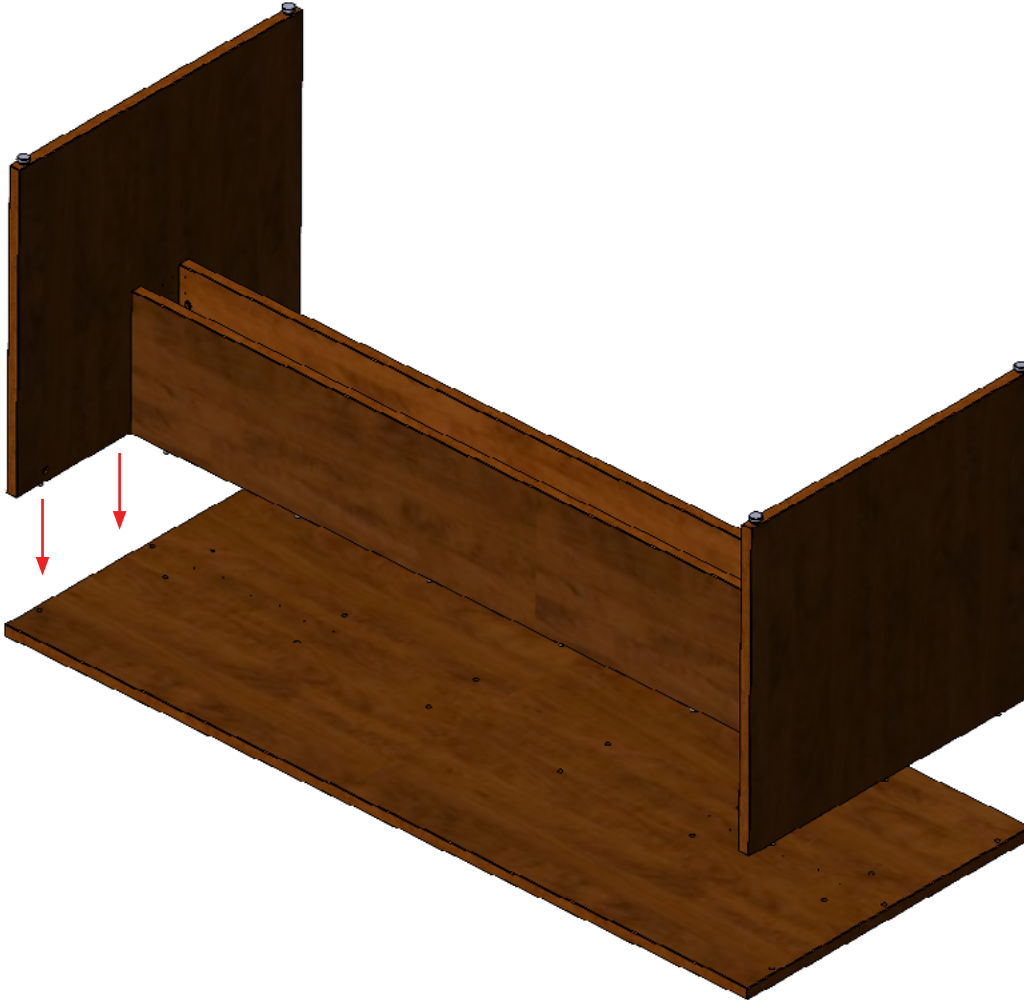

HARDWARE REQUIRED



PIN




CAM




COVER
CAP

STEP THREE

Using the provided pilot holes, attach six L-brackets to each side of the modesty panel with 5/8" wood screws. Ensure the brackets are securely fastened to hold the modesty panel firmly to both side panels.

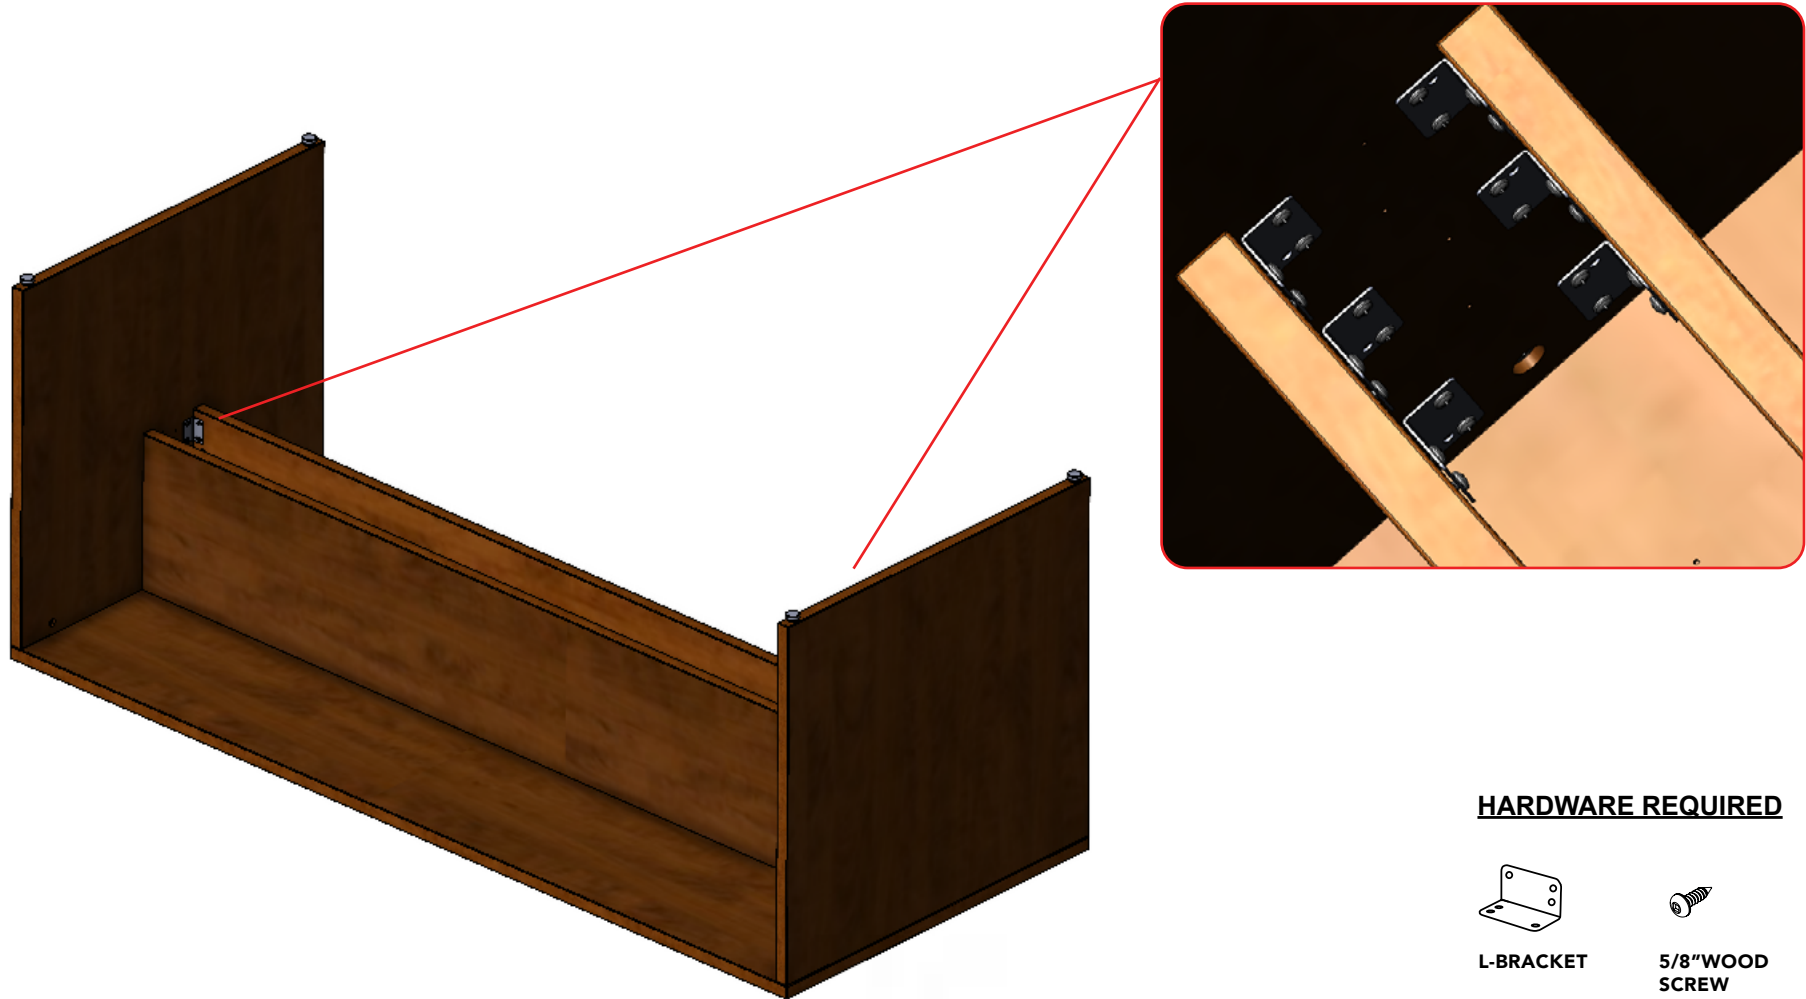

HARDWARE REQUIRED




L-BRACKET



5/8" WOOD
SCREW

STEP FOUR

Using the provided pilot holes, attach one 12"x18" brace to each side of the modesty panel with 5/8" wood screws. This will further reinforce the connection between the modesty panel and the side panels.

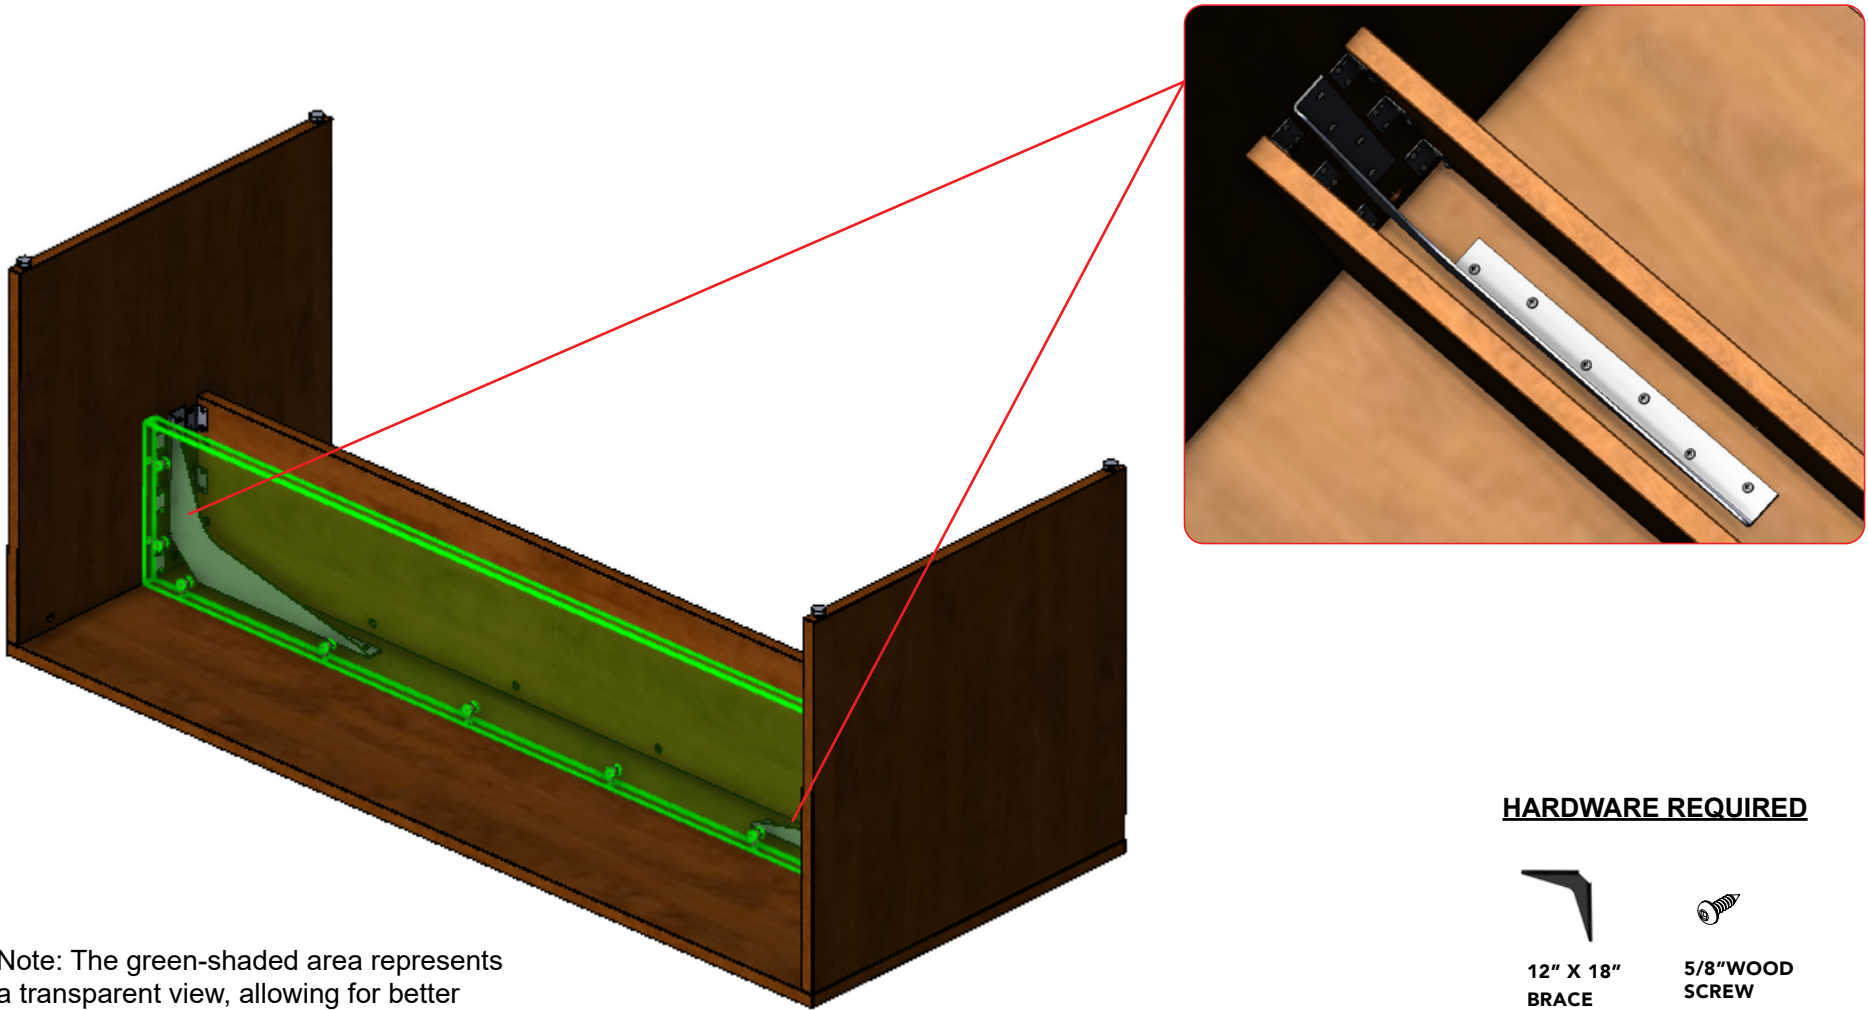

Note: The green-shaded area represents a transparent view, allowing for better visibility of the internal components.

HARDWARE REQUIRED



12" X 18"
BRACE



5/8" WOOD
SCREW

STEP FIVE

Ensure the floor glides are properly inserted into the bottom of the side gables, then with two or more people, carefully flip the table into an upright position.

