

USER GUIDE

3-LEG ELECTRIC HEIGHT ADJUSTABLE DESK



OFGO STUDIO

SAFETY AND WARNINGS

WARNING

Read all instructions and review all illustrations before installing. Failure to observe these warnings could result in a fire or electrical shock. This installation and operation manual should be provided to any user, installer or support personnel operating this product.


- Make sure no obstacles are in the desk's path.
- Make sure the desktop is not touching any walls.
- Make sure all cords are appropriate length to accommodate the change in height.
- Children should only operate the desk under adult supervision.
- There is a risk of injury and electric shock if not properly installed.
- Keep liquids away from electrical components.
- Do not sit or stand on the desk frame.
- Do not crawl or lie under the desk frame.
- Do not open any of the electrical components. There is a danger of electric shock.
- This product is designed with a duty cycle of 10% (2min. on, 18 min. off).
- In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary.
- Make sure no object taller than 50cm (20") is placed underneath the desk.

LIABILITY


This height adjustable desk has electric motors and is designed for use in dry work areas only. The desk height is adjustable so that it can be positioned at the most ergonomically suitable height. Any other use is at user's risk. Under no circumstances does the manufacturer accept warranty or liability claims for damages caused from improper use or handling of the desk frame.




TOOLS REQUIRED




Screwdriver (Philips)

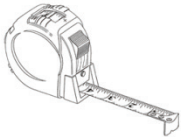


Measuring Tape



Power Drill



Safety glasses




Level

COMPONENTS


BOX 1

1-A




Lifting Column
x2

1-B




Standoff Leg
x1

2




Crossbar end
x4

3




Crossbar Center
Rails
x4

4




Side Bracket
x3

5




Cables
x4

6




Control Box
x1

7




Handset
x1

9



Leveling Glide
x1

10




Center Bracket
x1

BOX 2


Box #2 is not required for height adjustable tables which start with the series code SY.

8



Foot
x2


9



Leveling Glides
x4


HARDWARE

A




M5X18
x31

B




M6X16
x8

C




Cable Clips
x10

D




4mm Allen Key
x1

E




Plastic Fitting
(spare)
x6

F



M4x14
(Spare)
x6

G


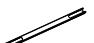



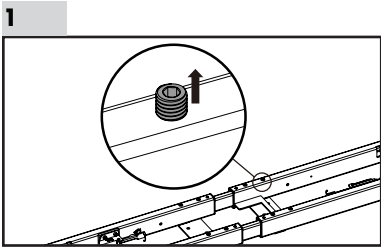
Plastic Spacer
(Spare)
x4




ASSEMBLY INSTRUCTIONS

1. PULL OUT THE FRAME


- 2** Crossbar end
x2 
- 3** Crossbar Center Rails
x2 
- D** 4mm Allen Key
x1 



Using the 4mm Allen key **D**, loosen the set screws on the crossbar ends **2**.

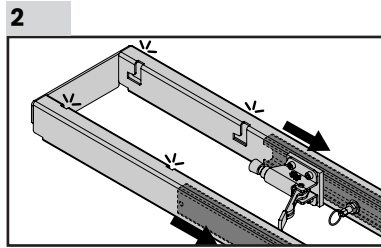

Extend the tubing so that the slots are cleared.

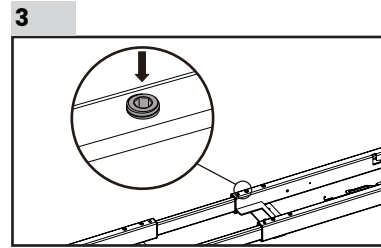



Tighten set screws before continuing.

Important

For tables measuring 76" to 96" in length, the standard center beams included with the base must be removed and replaced with longer center extender beams, which are shipped in a separate box.


2. ATTACH LEGS TO FRAME

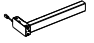- 1** Lifting Column
x2 

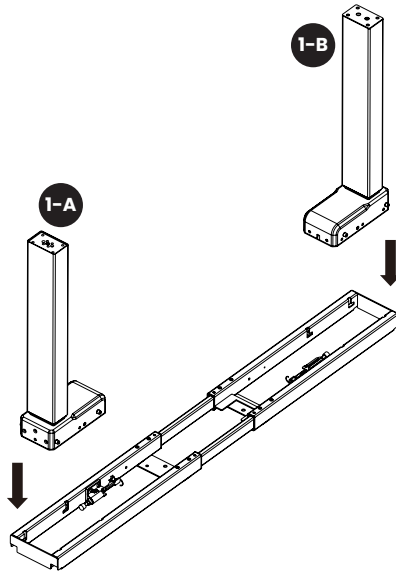


Note


Make sure to use the standoff leg (1-B)

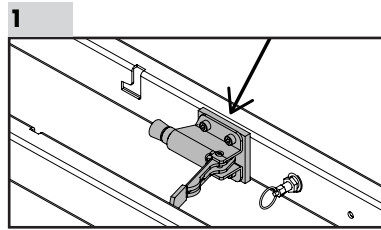

Ensure the Quick Install lever is in the open position.

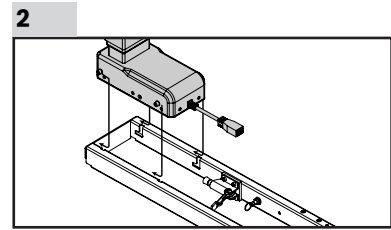

Slide the lifting column in the slots. Align using screws.

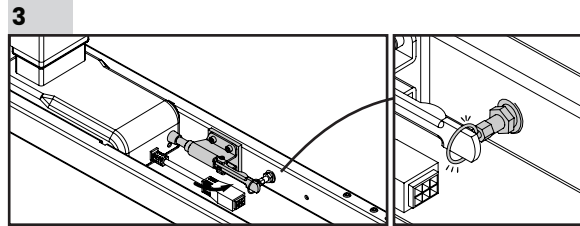

Set the quick latch in the lock position. Lock the quick latch by sliding the ring over the handle.




3. ATTACH SIDE BRACKET

- Slide the Side Brackets **4** into the frame and clip in place.

4

Side Bracket

×2

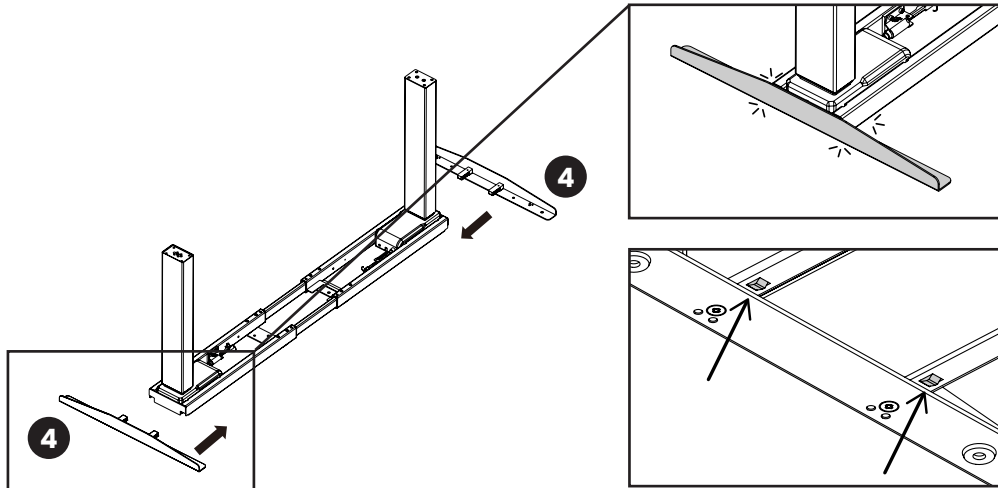

Push on the bracket and ensure they are properly clipped in place.

On the under side, you'll see the clip protrude when inserted properly.

4. ATTACH FEET

- Attach 2 leveling glides **9** to the bottom of foot.
- Attach foot **8** to lifting column **1-A** using M6x16mm **B**.
- Attach a leveling glide to the lifting column **1-B**. It can be inserted in either hole shown in diagram.

B

M6x16

×8



9

Leveling Glide


×3



8

Foot

×2

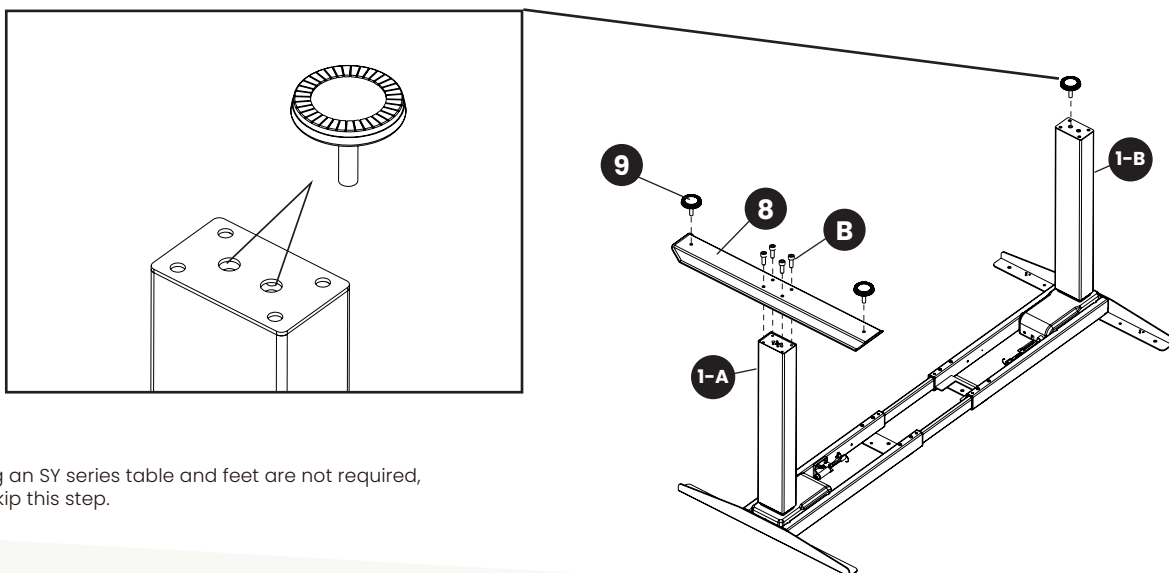


Note

If installing an SY series table and feet are not required, you can skip this step.



5. POSITION FRAME ON TABLETOP

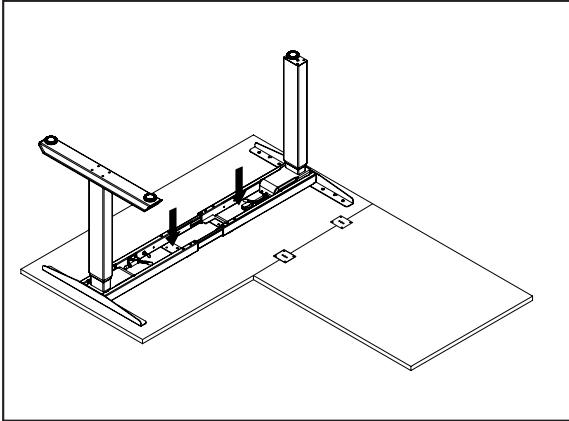



Position the frame on top of the tabletop.

Important

To protect finish during assembly, place top on soft, clean, scratch resistant surface with the pilot holes facing upwards.

6. PREPARE THIRD LEG KIT


- Install Side Bracket **4** and Center Bracket **10** to each side of the Crossbar Ends **2**.
- Place the frame at desired position on the tabletop.

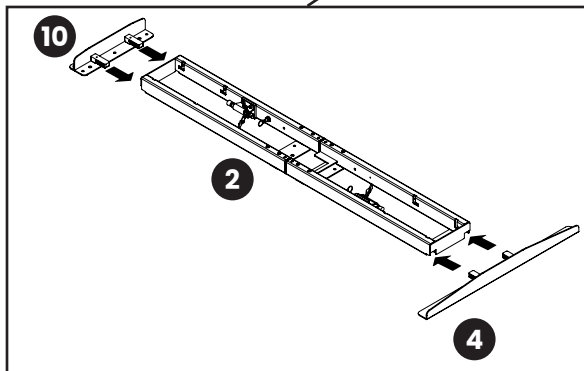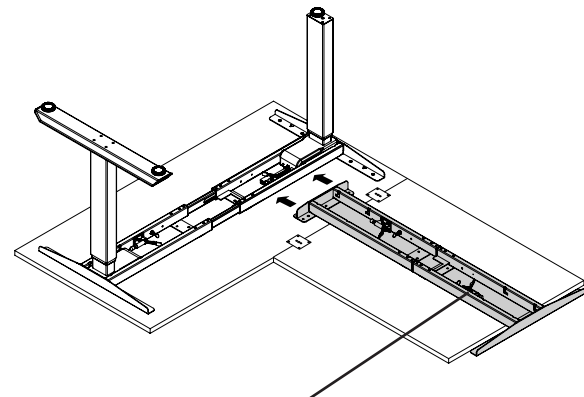

2	Crossbar End x2	
4	Side Bracket x1	
10	Center Bracket x1	


Note

For units which the depth of the return cannot accomoate both halves of the crossbar end, only install a single crossbar end.

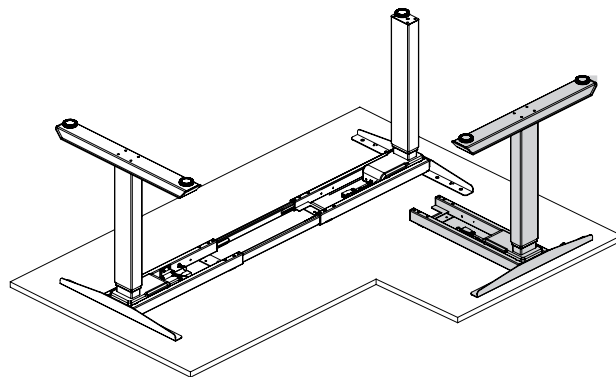


7. ATTACH 3RD LEG TO FRAME


7.1

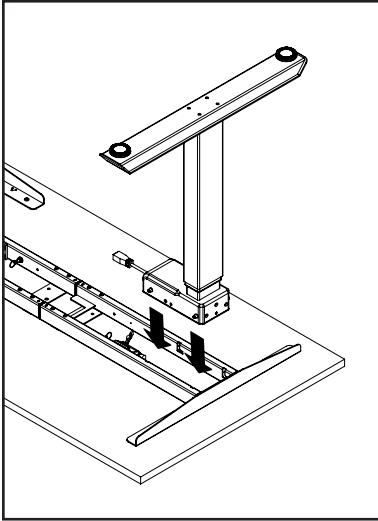


Attach lift column **1-A** to the frame extension.

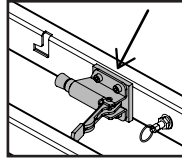

Ensure the Quick Install lever is in the open position.

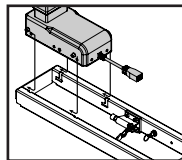

Slide the lifting column into the slots. Align using screws.

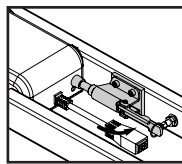

Set the quick latch in the lock position. Lock the quick latch by sliding the ring over the handle.

1

Lifting Column

x1



B

M6x16

x4




8

Foot

x1




7.2

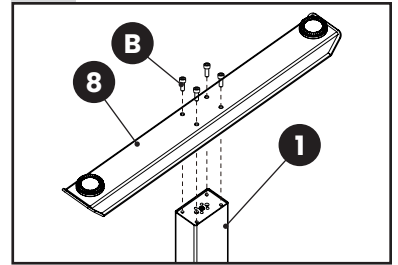

Attach foot **8** to lifting column **1** using M6x16 **B**.


8. ATTACH THE TABLETOP TO FRAME

8.1

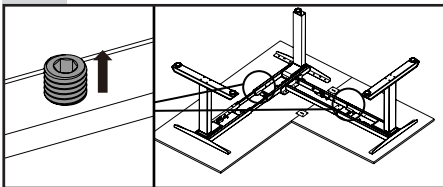


Loosen the set screws located on both frames

8.2

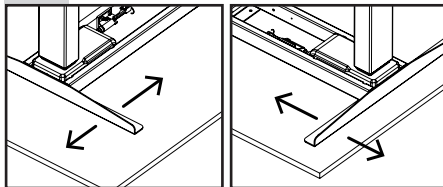

Adjust the frames to properly fit the tabletop.

8.3

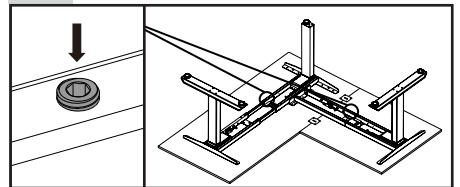


Tighten the set screws located on both frames

Reminder


For tables measuring 76" to 96" in length, the standard center beams included with the base must be removed and replaced with longer center extender beams, which are shipped in a separate box.

8.4

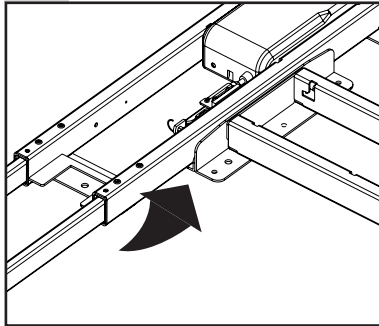

Ensure the Center bracket is properly installed underneath crossbar

8.5

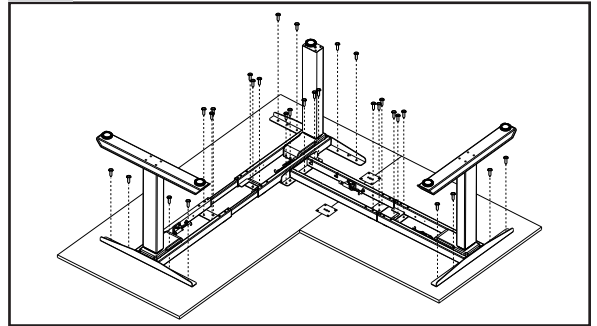

Use M5x18 screws **A** to attach frame to tabletop. Avoid over tightening the screws.

A


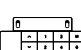

M5x18



x29



9. ATTACH THE CONTROL BOX & HANDSET

- Slide the Control Box **6** in the frame bracket.
- Attach Handset **7** to the tabletop using screws **A**.

6	Control Box x1	
7	Handset x1	
A	M5x18 x2	

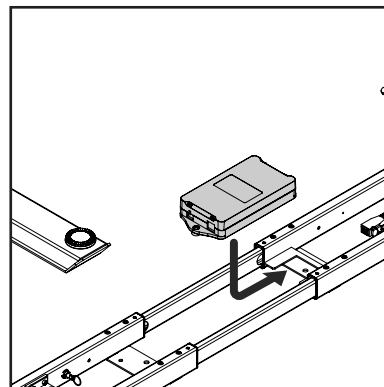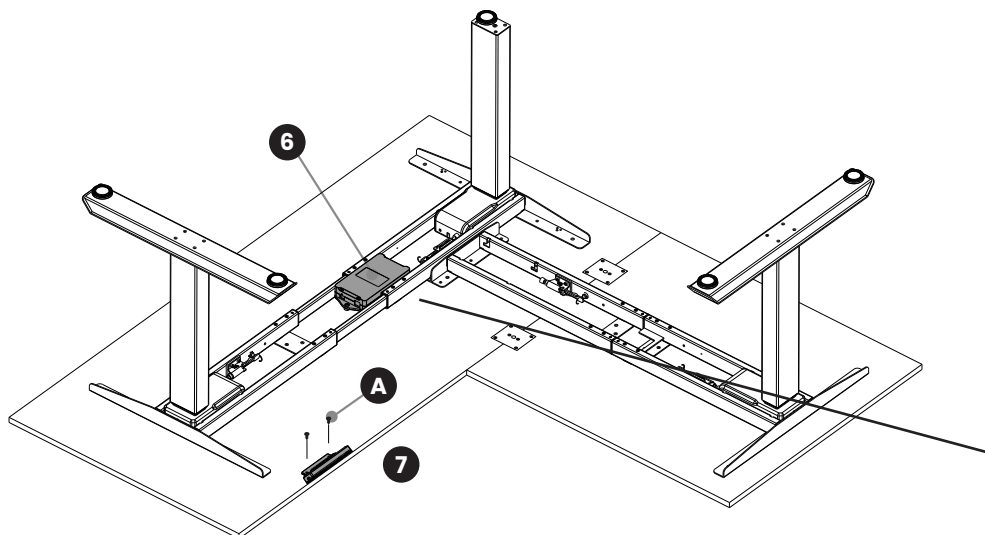

10. INSTALL CABLES

- Connect cables **5** as illustrated in diagram below.
- Secure cables to the tabletop using Cable Clips **C**.



Make sure all cables are properly connected and follow the route shown in the diagram.


5

Cables



C

Cable Clip

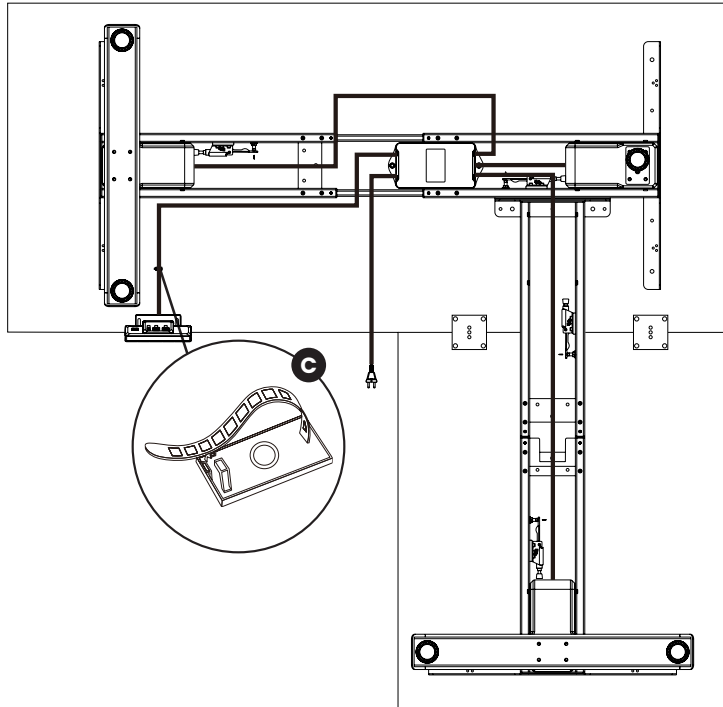


12. FINISH SETUP

- With the help of another person, flip the table upright.
- Adjust the leveling glides. Ensure that the tabletop is level.
- Connect the table to a power outlet.
- **Reset the table:** Refer to page 10 for instructions on how to perform a reset.



CONTROLLER OPERATION

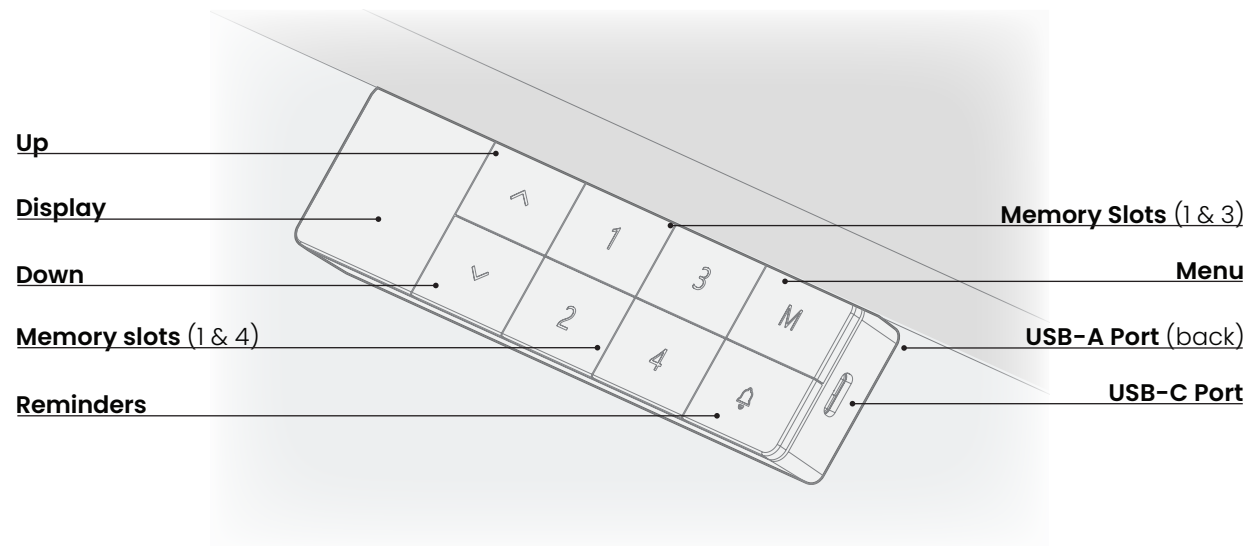

RESET OPERATION



A reset operation is needed when the table is first connected, if it displays "RES", or if it is behaving irregularly.



The table will ignore any programmed maximum height during the reset operation. Clear any items that are located in the table's path.

The anti-collision features will not work when the table is resetting. Ensure there are no obstacles in the table's path.

1. Hold the **"Up"** button until the table reaches its highest point.
2. Press and hold the **"Up"** button when at highest point.
3. The table will start moving and the handset will display **"RES"**. Keep holding the **"Up"** button.
4. The reset is completed when the table stops moving, the **"RES"** message is cleared and the handset displays the current height.

Releasing the **"Up"** button when **"RES"** appears will interrupt the reset. If incomplete, **"RES"** will remain on the display, and the table cannot be adjusted until a reset is completed.



BASIC USE

POWER ON

The handset will power automatically when plugged in.

HEIGHT ADJUSTMENT

- Press and hold the **“Up”** button to raise the table. Release to stop.
- Press and hold the **“Down”** button to lower the table. Release to stop.

SAVE HEIGHT TO MEMORY

1. Position the table at the desired height.
2. Press the “Menu” button. The display will indicate **“S--”**.
3. Press one of the “Memory Slot” buttons to select where to save the height.
4. To adjust the table to the preset, select the number it was save to.

Depending on the automatic mode configuration, the number might need to be held to reach the saved height.

SAFETY LOCK

- To lock, press and hold the **“Up”** and **“Down”** buttons simultaneously. The display will read **“LOC”** when locked.
- To unlock, press and hold the **“Up”** and **“Down”** buttons simultaneously until the display indicates the current height.

SLEEP MODE

The display will turn off after 1 minute of inactivity. Press any key to wake the handset.

USB CHARGING

The handset has a USB-C port located on its side, and a USB-A port located at the back.

Power delivery: 18W Quick charging, power divided between the two ports when both in use.

ANTI-COLLISION PROTECTION

When the tabletop encounters an obstacle in the process of ascending or descending, it will immediately travel slightly in the opposite direction. The table will operate normally after obstacles are removed.



MINIMUM AND MAXIMUM HEIGHT LIMIT SETTING



This feature allows to set custom height limits for the table, preventing it from moving beyond a defined range. It is useful for restricting movement to a preferred working height or to avoid an obstacle.



Use this function only if necessary.

SETTING A HEIGHT LIMIT:

- Move the table to the desired height (minimum or maximum).
- To set the custom limit, press and hold **"M" + the corresponding arrow button ("Up" for maximum or "Down" for minimum)** for 5 seconds.
- The table will beep to indicate that the limit has been set.

REMOVING A HEIGHT LIMIT

- Position the table at the programmed limit (minimum or maximum).
- To remove the custom limit, press and hold **"M" + the corresponding arrow button ("Up" for maximum or "Down" for minimum)** for 5 seconds.
- The table will beep to indicate that the limit has been removed.

CHANGE POSITION REMINDER (🔔)

This feature is intended to help avoid sitting down for too long by providing periodic reminders to stand up.

SETTING REMINDER TIME

By default, reminders are deactivated, which is indicated by an interval of **"0.0h"**

- Press the **"🔔"** button to access the reminder menu.
The display will read the interval between reminders.
- Use the **"Up"** or **"Down"** buttons to adjust the reminder interval.
- The time can range from 0 hours to 9 hours, adjustable in 30-minute increments.

REMINDER ACTIVATION

The handset will notify the entered time is saved by displaying **"..."** When active, the handset beeps at the set interval.

DISABLING REMINDERS

To disable the reminders, set the reminder time to **"0.0h"**



SETTINGS MENU

The settings menu allows to customize various desk functions, such as units preferences, height limits and collision sensitivity.

CONTROLS

- To access the settings menu, press and hold the **"Menu"** button until the content on the display starts flashing.
- Switch between the different settings by pressing the **"Menu"** button.
- Use the **"Up"** and **"Down"** button to adjust a setting.
- To save and exit, press and hold the **"Menu"** button. The display will exit back to the displayed height.

SETTINGS LIST

DISPLAY	OPTION	DESPCRIPTION
1-X	Display Units	Change the display units. 1-0: Centimeters 1-1: Inches
2-X	Gyro sensitivity	Adjust the gyroscope's sensitivity. 2-0: Off (Not recommended) 2-1: Most sensitive 2-8: Least sensitive
3-X	Upward anti-collision sensitivity	Adjust sensitivity to obstacles when moving upwards. 3-1: Most sensitive 3-8: Least sensitive
4-X	Downward anti-collision sensitivity	Adjust sensitivity to obstacles when moving downwards. 4-1: Most sensitive 4-8: Least sensitive
5-X	Tilt sensitivity	Adjust tilt detection sensitivity. 5-0: Off (Not recommended) 5-1: Most sensitive 5-8: Least sensitive
XXX	Minimum table height	Define the lowest frame height without a tabletop. To set: 1. Lower the table to its minimum height. 2. Measure under the tabletop. 3. Adjust to match the measured height.
7-X	Automatic presets	Configure how height preset buttons function. 7-0: Press and hold the preset keys to move to the saved height. 7-1: Pressing once moves the desk until pressed again.



TROUBLESHOOT GUIDE

Consult this guide if a handset displays an error code. Before performing any troubleshooting steps, be sure the outlet is working and the following connections are secure:

- Handset cable to control box.
- Lifting column to cables.
- Cables to control box.
- Power cord to control box.

ERROR MESSAGE LIST

CODE	ISSUE	TROUBLESHOOT
HOT	The control box is overheating or ran for more than two minutes in an 18-minute time window.	Wait for the control box temperature to drop by letting the system rest for 18 minutes before running again. If the table needs to be moved immediately, disconnect for 15 seconds and plug back in.
LOC	Handset is locked (safety feature).	To unlock the desk, press and hold the “Up” and “Down” buttons simultaneously until the display indicates the current height.
--- /8.8.8	Bad connect to the handset.	Ensure both the handset and control box are properly connected. <ul style="list-style-type: none"> • If the issue persists, try replacing the handset. • If the issue persists after replacing the handset, try replacing the control box
Blank Screen	No power or disconnected cables.	Ensure all cables are properly connected. <ul style="list-style-type: none"> • If the issue persists, try replacing the handset. • If the issue persists after replacing the handset, try replacing the control box
E4	Poor connection of handset cable port.	Check if the cable is properly connected, if the issue persists, replace the control box
E6	Power failure.	Ensure power cable is properly connected. If the issue persists, replace the power supply
E7	Abnormal power during operation.	Restart the table by unplugging the power cable for 15 seconds and plugging back in.
E8	The desk tilted during operation.	Reset the table. See page 9 for reset steps.
E11- E38	Defective control box or lift column	<ol style="list-style-type: none"> 1. Check if the control box or column is faulty: Switch the connections for the lifting columns M1 and M2(M3 if applicable). reconnect the power cable and check the error code. <ol style="list-style-type: none"> A. If the same code appears, replace the control box. B. If the message changes, you will need to replace a lift column. 2. Check which column is faulty: <ol style="list-style-type: none"> A. E11-E18 means the column M1 is faulty. B. E21-E28 means the column M2 is faulty. C. E31-E38 means the column M3 is faulty (3-leg only).
E36	3rd leg motor shutoff. (3-leg only.)	Reset the table. See page 10 for reset steps.
E42	Memory error.	Replace the handset.
E43	Stop sensor error.	Replace the handset.

